
## Typical wiring for monitoring a standard trouble relay

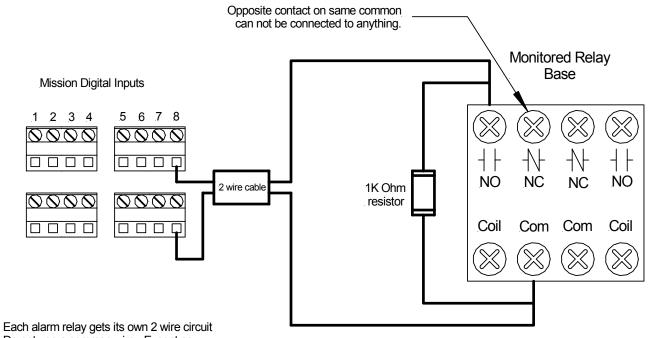

Do not use a common wire. Except as

shown below, which is not recommended, but will work.

## Typical wiring for a PLC controller

If wiring to a PLC with a common position for digital outputs instead of a dry contact.

