


Typical wiring for monitoring a standard trouble relay

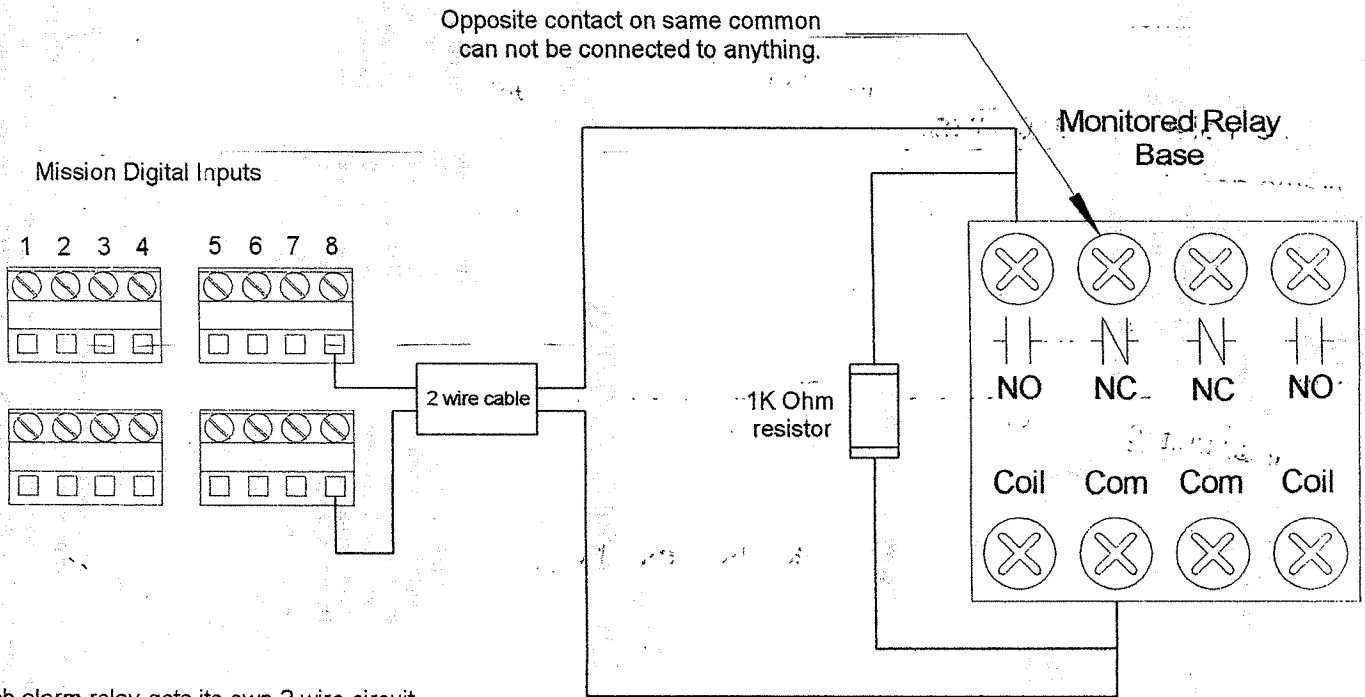

Each alarm relay gets its own 2 wire circuit
Do not use a common wire. Except as shown below, which is not recommended, but will work.

Typical wiring for a PLC controller

If wiring to a PLC with a common position for digital outputs instead of a dry contact.

